

HM_010

22.12.2008


To whom it may concern

Re-assembled safety valves type 06388, 06418 by HEROSE unauthorized person

Beginning of December 2008 and also several times in the past HEROSE was informed by one customer, that the safety valves 06388 and 06418 (with lifting device) does not work in a safety manner. As a reason for this it was found out that other persons than HEROSE authorized personal has disassembled and again re-assembled the safety valves with a wrong and dangerous position of the guide disc and guide plate (see picture 1). If the safety valves will be re-assembled and the disc guide is not fixed in the guide plate the disc will be pressed through the guide plate on the seat and the safety valve is totally blocked!

In all of these cases it has to be pointed out that the original HEROSE-seal was destroyed and HEROSE is out of any guarantee or liability!

To be sure that the installed safety valves are re-assembled correctly it can be checked by a visual inspection easily. The correct assembly is shown in picture 2.

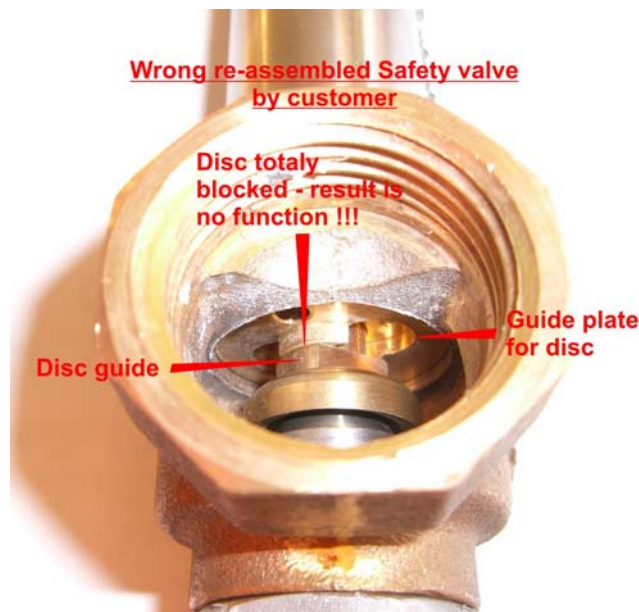

Pict. 1



Pict. 2

Olaf Schulenberg
HEROSE GmbH